


hp
StorageWorks

ESL
E-Series
Air Filters

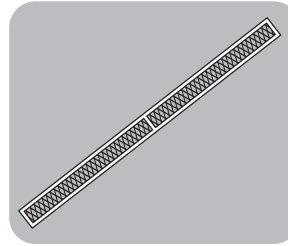


Caution: Parts can be damaged by electrostatic discharge. Keep parts in their containers until needed. Ensure you are properly grounded when touching static-sensitive components.




Note: This part is hot-pluggable. It is not necessary to power down the library to replace this part.

1

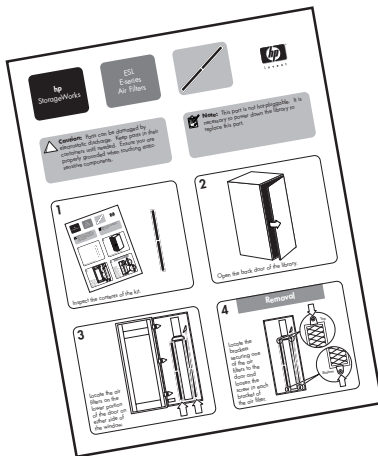


Inspect the contents of the kit.

2

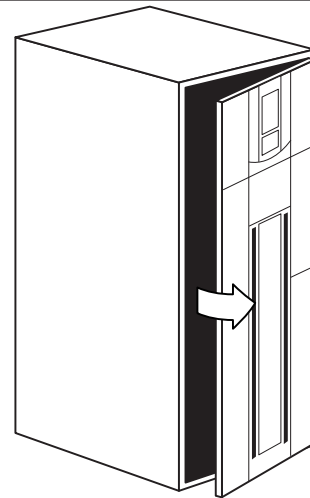

Open the front door of the library.

3

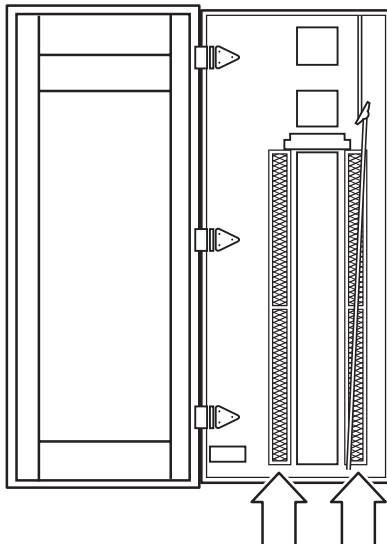


Locate the air filters on the lower portion of the door on either side of the window.

4

Removal


Locate the brackets securing one of the air filters to the door and loosen the screw in each bracket of the air filter. Rotate the top bracket away from the filter and pull the filter up and away from the door.

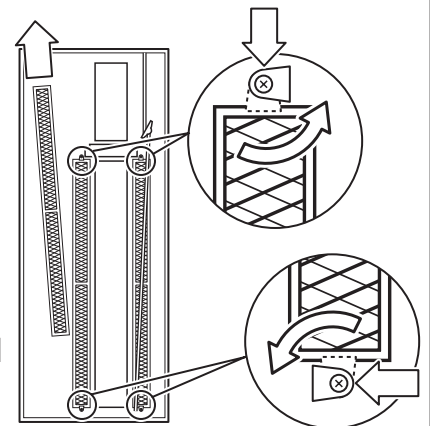

5

Replacement


Slide the new filter down and into place against the door. Rotate the bracket back into place to hold the filter, and secure it by tightening the screws on both the top and bottom brackets.

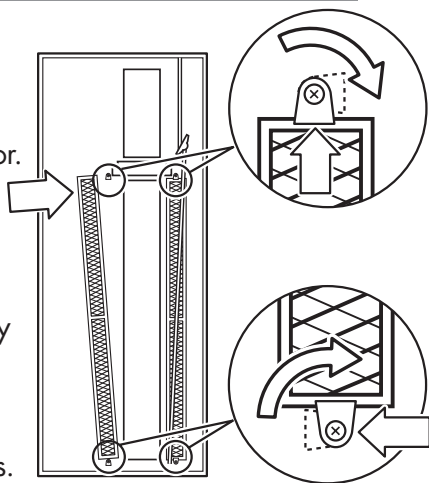

6

Repeat steps 4 and 5 for the other filter.

7

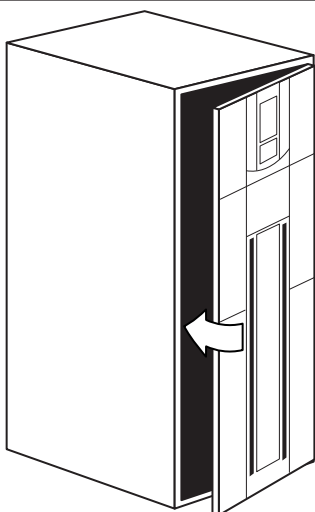

Close the front door of the library.

Getting help

- HP product information:
<http://www.hp.com/products/tapestorage>
- HP technical support and phone numbers:
<http://www.hp.com/support>
- HP StorageWorks Library and Tape Tools (L&TT) diagnostic software:
<http://www.hp.com/support/tapetools>
- Interface Manager and HP StorageWorks Command View ESL:
<http://www.hp.com/support/cvesl>

© Copyright 2004 Hewlett-Packard Development Company, L.P.

First Edition (January 2004)
Part Number: 353451-001



353451-001